


Client: _____ Project Name: _____
 MODA Contact: _____ E-Mail: _____
 SKU: _____ Type: _____ PO #: _____ Quantity: _____
 Notes: _____



Miniature Line Voltage Cove Color Fixture.

MODA MINI COVE COLOR INTERIOR is an award winning, patented, miniature line voltage cove lighting system. Now available in mono static colors, these unique colors can enhance any environment. For projects which require a unique static color the only way to achieve this is by mixing red, green and blue colors with DMX 512 controls, DMX 512 enabled fixtures, DMX wiring and time to program the specific color required. All of this has a cost. This is now eliminated by choosing MODA MINI COVE Color. No longer do you have to worry about the red die degrading faster than green and blue dies, hence having a shift over time with the specific color the designer has chosen. Enjoy worry free simple color specific fixtures. Easy 3 wire connections for on/off or ELV dimming control, or standard 5 wire for 0-10V installations. This drastically reduces installation time and cost. Choose from Red, Green, Blue, Amber, Yellow, Golden Yellow, Ice Blue, Cyan, Light Green, Pink, Violet or Turquoise. If a project requires a custom color we are able to create that color in our laboratory with our own ability to mix proprietary MODA Phosphor to create virtually any color required.

Unlike other fixtures which are much larger in physical size, MINI COVE utilizes the latest Advanced MODA Design and Electronic Engineering, ensuring fixtures are cool to the touch. This is achieved by designing a forward thinking fixture with intelligent driver technology and by under driving the most advanced LEDs in the World. Thus creating a fixture which is so cool it can be held after days of illumination. The L70 (longevity) of the fixture is extended and phosphor degradation is kept to a minimum.

The Onboard American Dimming Chipset, programmed by our MODA Software Division with new Advanced Firmware ensures MINI COVE delivers smooth, no noise, flicker free and synchronized dimming down to 0% with ELV or 0-10V Dimmers. Choose from either ELV or 0-10V direct dimming fixtures. Unlike other fixtures in the marketplace there is no need to purchase additional adapters, converters, dimming boxes or control modules, just use conventional wiring direct from the dimmer to create a powerful lighting system, saving time and money. Link any combination of 6", 1ft, 4ft and 8ft fixtures and every fixture will dim together smoothly, synchronized from 100% to 0%. With no minimum run lengths, just one 6" fixture will dim seamlessly to 0%.

With MINI COVE the installer is able to achieve long single runs of up to 240 feet decreasing the number of wiring circuits required in an installation. Another step forward in this category of small sized fixtures is the Universal power input. We designed a small MODA Micro Driver specific for MINI COVE enabling it to accept 100-277V AC 50/60 Hz, thus decreasing the number of SKU's needed to be held by any of our Worldwide distributors and giving the installer a choice of power inputs from one fixture.

A specialized curved polymer optical lens combined with a cleverly designed Light Chamber delivers a light bending, smooth 200 degree beam pattern perfect for cove installations with no color over angle, no striations, inter locking fields of light and no dark spots.

The fixture incorporates an integral, patented, tool less self-locking bracket which slides into any position and turns 170 degrees. Built-in male & female connectors with thumb latch connections for fast installation time. Lightweight aluminum construction for durability and excellent thermal characteristics. Quality American Made electronic components. Available in a tiny 6 inch size (15cm) for tight turning coves and to finish a small space on the end of a run. Perfect for bending curves - link up to 320 fixtures in a single run. 1ft, 4ft and 8ft lengths are for fast installation saving expensive labor installation costs and achieving long runs of quality illumination in rapid time.

Tested by Intertek to UL1598 for use in USA & Canada. CE Approved. WEE. RoHS Compliant. TM-30-15 Tested. US Patent No. D787,112 and D783,890.

Product Innovation Award (PIA) Winner 2016 for Best Luminaire. LFI Innovation Award 2017 Finalist for Dynamic Color, Theatrical, Cove, Strips and Tape. Lux Award Commended for Interior Product of the Year 2016. Darc Awards Finalist for Best Architectural Lighting Product - Interior Luminaires 2016. International Design Excellence Award for Innovative Product Design Finalist 2016.

Designed & Developed by MODA LIGHT in Las Vegas, USA.

PAGE

3	FEATURES
4	1 FOOT
5	1 FOOT SO POLAR CANDELAS
6	1 FOOT HO POLAR CANDELAS
7	1 FOOT SO ILLUMINANCE
8	1 FOOT HO ILLUMINANCE
9	4 FOOT
10	4 FOOT SO POLAR CANDELAS
11	4 FOOT HO POLAR CANDELAS
12	4 FOOT SO ILLUMINANCE
13	4 FOOT HO ILLUMINANCE
14	CHROMATICITY
15	0-10V WIRING
16	ACCESSORIES: MOUNTING TRACK
17	ACCESSORIES: CABLES
18	FIXTURES & ACCESSORIES
19	FIXTURES & ACCESSORIES

PHYSICAL

Dimensions	6 5/8in, 1ft 1/4in, 4ft 5/32in, & 8ft sections available
Weights	6in: 0.21 lbs (0.10 kg) / 1ft: 0.38 lbs (0.17kg)/ 4ft: 1.22 lbs (0.55 kg) /8ft: 2.61 lbs (1.18kg)
Applications	Cove, Accent & Indirect General Illumination
Construction	6063 Aluminum Body, Polycarbonate Self-Locking Mounting Bracket and Optical Lens
Ingress Protection	Dry/Damp Location IP52
Thermal Management	MODA Aluminum Heat Sink
Beam Angle	200°
Fixture Connections	Integral Male & Female Connectors
Operating Temperature	-40°F ~ 122°F (-40°C ~ 50°C)
Storage Temperature	-40°F ~ 176°F (-40°C ~ 80°C)
Humidity	0-95% Non Condensing

OUTPUT

CCT & SDCM	N/A
Colors	Red, Green, Blue, Amber, Yellow, Golden Yellow, Ice Blue, Cyan, Light Green, Pink, Violet, Turquoise, Dark Blue and Dark Orange available
Color Bin Tolerance	Zero Bin
CRI	N/A
Lumen Maintenance	90,000 Hours L70 @ 25°C 70,000 Hours L70 @ 50°C
Testing Data	Light Data LM-79-08 & LM-80-08

ELECTRICAL

Input Voltage	100-277V AC 50Hz/60Hz
Control	0-10V
Power Factor	≥ 0.98

DIMMING

Outputs Available	
1 Foot	SO, HO
4 Foot	SO, HO

MODA TECHNOLOGY

modaSOFTWARE™

modaHARDWARE™

modaDIM™

modaLED™

modaMICRO DRIVER™

modaPHOSPHOR™

modaZERO BIN™

modaTHERMAL MANAGEMENT™

modaAIRFLOW™

modaCOLOR RENDITION™

modaLOCK™

modaKWIK CONNECT™




RoHS ✓



Certification Tested to UL & CSA by Intertek For Use in USA & CANADA. Exceeds ANSI C78.377-2015, CE, CCC, C-Tick, RoHS, & WEEE Compliant.

Class 1

Warranty 5 Year Limited Warranty

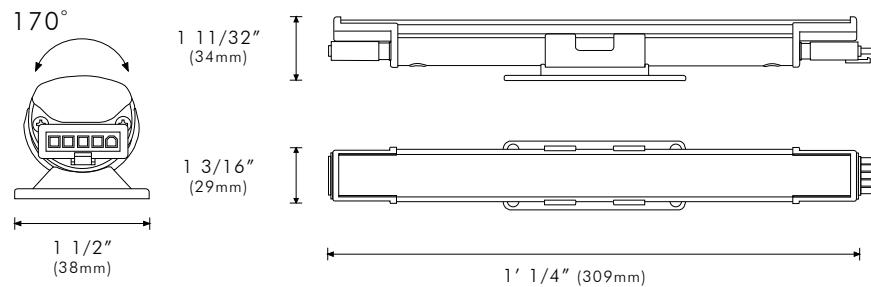

0-10V

Standard Output	Lumens	Efficacy (120V)	Efficacy (240V)	Efficacy (277V)
Red	168	36	31	29
Green	196	42	36	34
Blue	140	30	25	24
Amber	234	50	43	40
Yellow	215	46	39	37
Golden Yellow	509	108	93	88
Ice Blue	429	91	78	74
Cyan	169	36	31	29
Light Green	490	104	89	84
Pink	200	43	36	34
Violet	194	41	35	33
Turquoise	168	36	31	29
Dark Blue	84	18	15	14
Dark Orange	420	89	76	72

SO Power Consumption

120V	4.7W
240V	5.5W
277V	5.8W

SO Max Continuous Run

120V AC	120 ft
240V AC	240 ft
277V AC	240 ft

High Output	Lumens	Efficacy (120V)	Efficacy (240V)	Efficacy (277V)
Red	336	36	34	34
Green	395	42	40	40
Blue	286	30	29	29
Amber	464	49	47	46
Yellow	430	46	43	43
Golden Yellow	1015	108	103	102
Ice Blue	858	91	87	86
Cyan	338	36	34	34
Light Green	980	104	99	98
Pink	402	43	41	40
Violet	388	41	39	39
Turquoise	341	36	34	34
Dark Blue	468	50	47	47
Dark Orange	840	89	85	84

HO Power Consumption


120V	9.4W
240V	9.9W
277V	10W

HO Max Continuous Run


120V AC	50 ft
240V AC	100 ft
277V AC	100 ft

STANDARD OUTPUT


SO Red

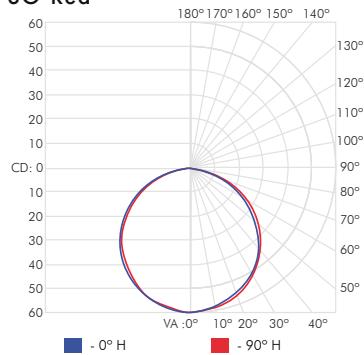


SO Green

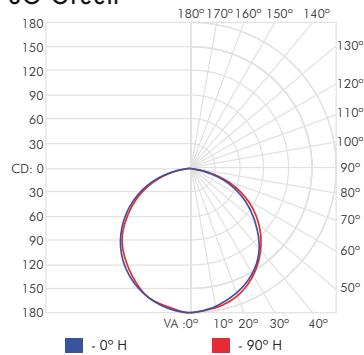


SO Blue

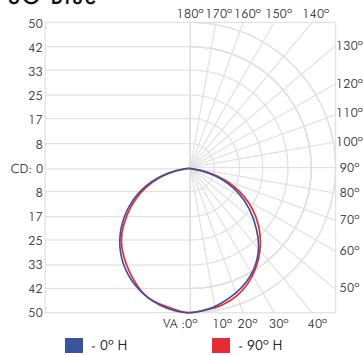


SO Amber

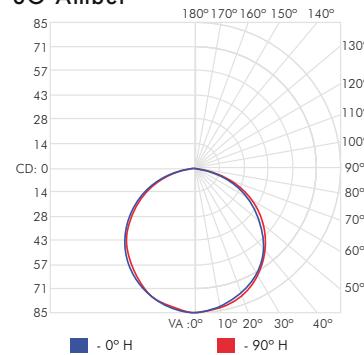


SO Yellow

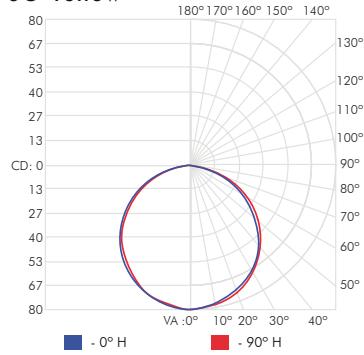


SO Golden Yellow

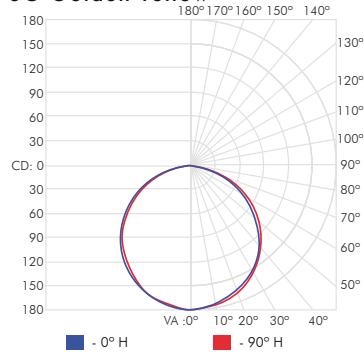


SO Ice Blue

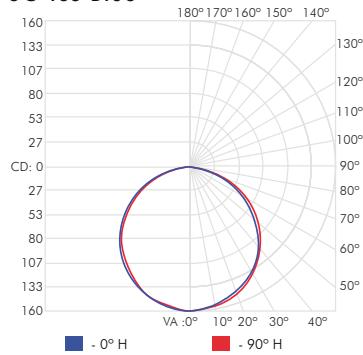


SO Cyan

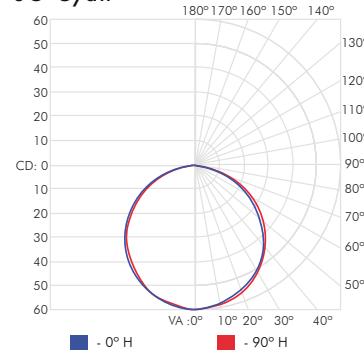


SO Light Green

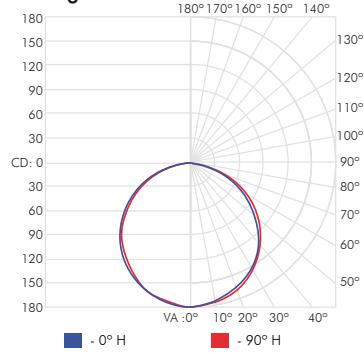


SO Pink

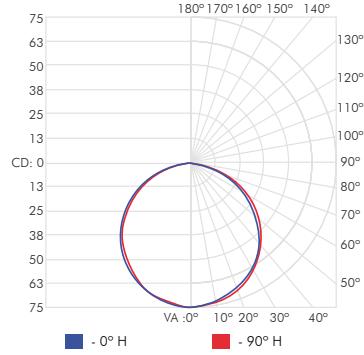


SO Violet

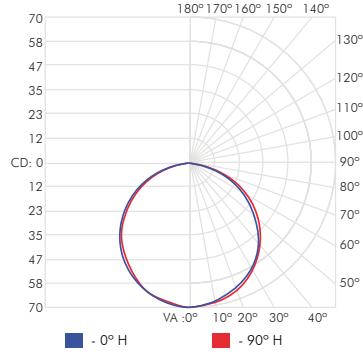


SO Turquoise

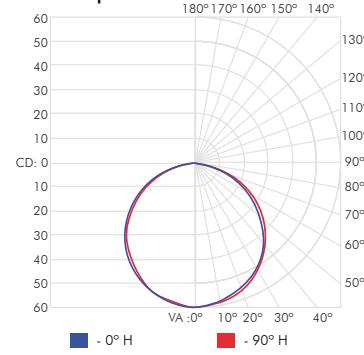

SO Dark Blue

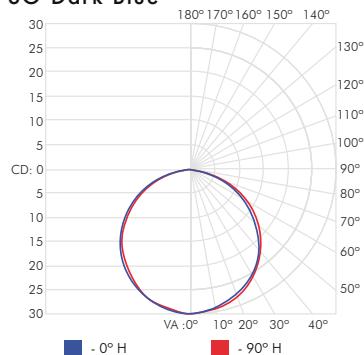


SO Dark Orange

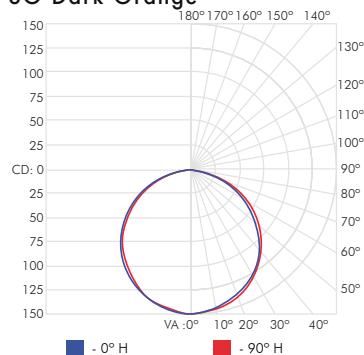


HIGH OUTPUT


HO Red

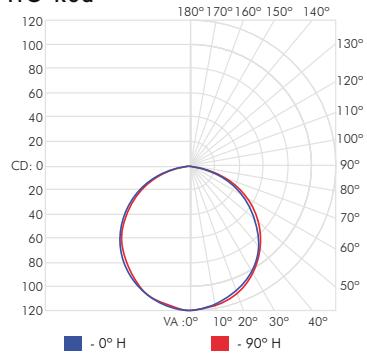


HO Green

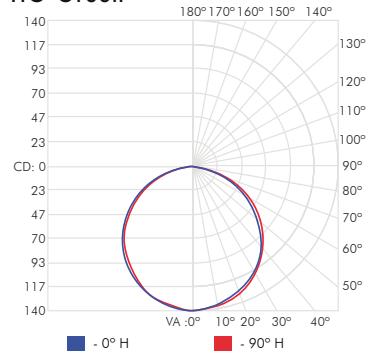


HO Blue

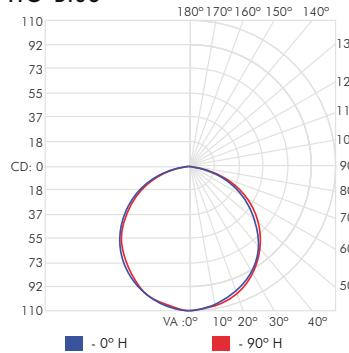


HO Amber

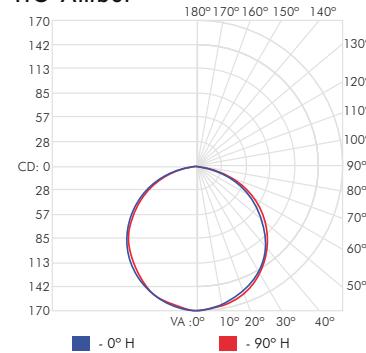


HO Yellow

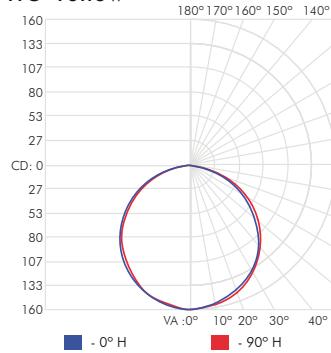


HO Golden Yellow

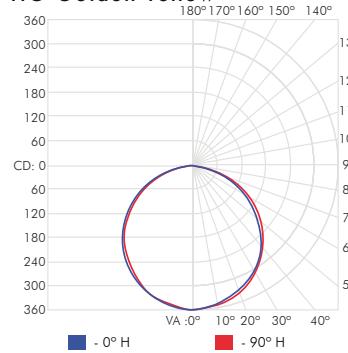


HO Ice Blue

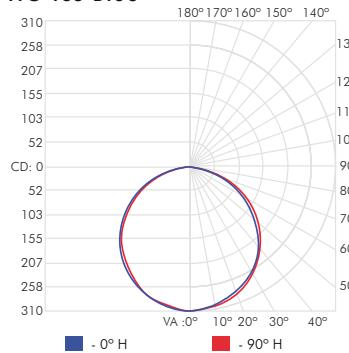


HO Cyan

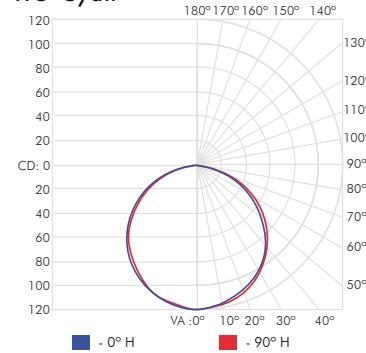


HO Light Green

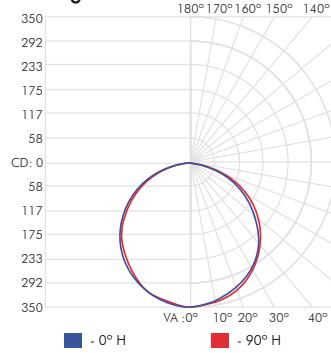


HO Pink

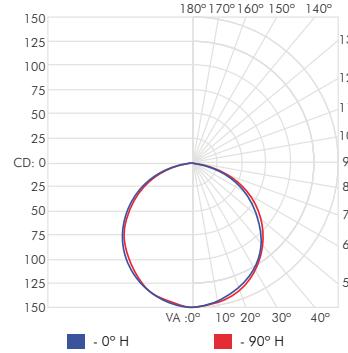


HO Violet

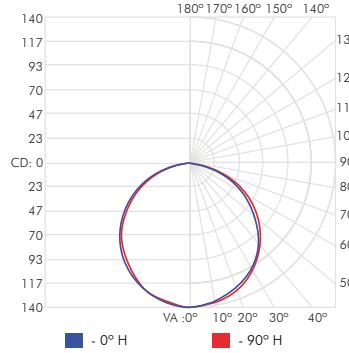


HO Turquoise

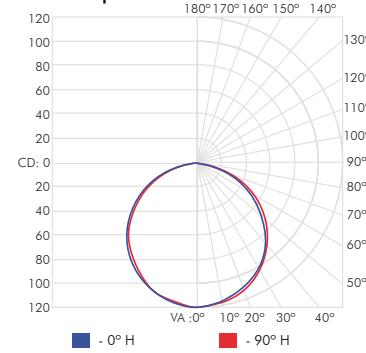

HO Dark Blue

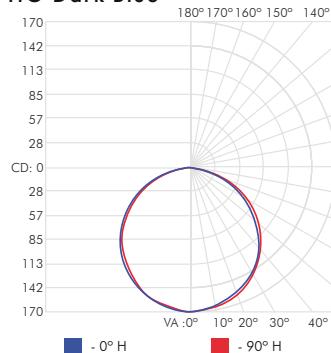

HO Dark Orange

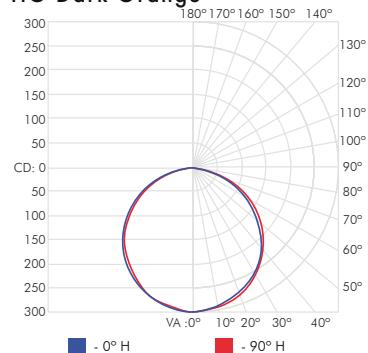

STANDARD OUTPUT

SO Red

	Center Beam FC	Beam Width
2.0 ft	14.7 fc	6.0 ft 6.1 ft
4.0 ft	3.68 fc	12.1 ft 12.2 ft
6.0 ft	1.64 fc	18.1 ft 18.4 ft
8.0 ft	0.92 fc	24.2 ft 24.5 ft
10.0 ft	0.59 fc	30.2 ft 30.6 ft
12.0 ft	0.41 fc	36.2 ft 36.7 ft

SO Yellow

	Center Beam FC	Beam Width
2.0 ft	18.8 fc	6.0 ft 6.1 ft
4.0 ft	4.71 fc	12.1 ft 12.2 ft
6.0 ft	2.09 fc	18.1 ft 18.4 ft
8.0 ft	1.18 fc	24.2 ft 24.5 ft
10.0 ft	0.75 fc	30.2 ft 30.6 ft
12.0 ft	0.52 fc	36.2 ft 36.7 ft

SO Green

	Center Beam FC	Beam Width
2.0 ft	17.2 fc	6.0 ft 6.1 ft
4.0 ft	4.29 fc	12.1 ft 12.2 ft
6.0 ft	1.91 fc	18.1 ft 18.4 ft
8.0 ft	1.07 fc	24.2 ft 24.5 ft
10.0 ft	0.69 fc	30.2 ft 30.6 ft
12.0 ft	0.48 fc	36.2 ft 36.7 ft

SO Blue

	Center Beam FC	Beam Width
2.0 ft	12.3 fc	6.0 ft 6.1 ft
4.0 ft	3.07 fc	12.1 ft 12.2 ft
6.0 ft	1.36 fc	18.1 ft 18.4 ft
8.0 ft	0.77 fc	24.2 ft 24.5 ft
10.0 ft	0.49 fc	30.2 ft 30.6 ft
12.0 ft	0.34 fc	36.2 ft 36.7 ft

SO Amber

	Center Beam FC	Beam Width
2.0 ft	20.5 fc	6.0 ft 6.1 ft
4.0 ft	5/13 fc	12.1 ft 12.2 ft
6.0 ft	2.28 fc	18.1 ft 18.4 ft
8.0 ft	1.28 fc	24.2 ft 24.5 ft
10.0 ft	0.82 fc	30.2 ft 30.6 ft
12.0 ft	0.57 fc	36.2 ft 36.7 ft

SO Golden Yellow

	Center Beam FC	Beam Width
2.0 ft	44.6 fc	6.0 ft 6.1 ft
4.0 ft	11.1 fc	12.1 ft 12.2 ft
6.0 ft	4.95 fc	18.1 ft 18.4 ft
8.0 ft	2.79 fc	24.2 ft 24.5 ft
10.0 ft	1.78 fc	30.2 ft 30.6 ft
12.0 ft	1.24 fc	36.2 ft 36.7 ft

SO Ice Blue

	Center Beam FC	Beam Width
2.0 ft	37.6 fc	6.0 ft 6.1 ft
4.0 ft	9.40 fc	12.1 ft 12.2 ft
6.0 ft	4.18 fc	18.1 ft 18.4 ft
8.0 ft	2.35 fc	24.2 ft 24.5 ft
10.0 ft	1.50 fc	30.2 ft 30.6 ft
12.0 ft	1.04 fc	36.2 ft 36.7 ft

SO Cyan

	Center Beam FC	Beam Width
2.0 ft	14.8 fc	6.0 ft 6.1 ft
4.0 ft	3.70 fc	12.1 ft 12.2 ft
6.0 ft	1.65 fc	18.1 ft 18.4 ft
8.0 ft	0.93 fc	24.2 ft 24.5 ft
10.0 ft	0.59 fc	30.2 ft 30.6 ft
12.0 ft	0.41 fc	36.2 ft 36.7 ft

SO Light Green

	Center Beam FC	Beam Width
2.0 ft	42.9 fc	6.0 ft 6.1 ft
4.0 ft	10.7 fc	12.1 ft 12.2 ft
6.0 ft	4.77 fc	18.1 ft 18.4 ft
8.0 ft	2.68 fc	24.2 ft 24.5 ft
10.0 ft	1.72 fc	30.2 ft 30.6 ft
12.0 ft	1.19 fc	36.2 ft 36.7 ft

SO Pink

	Center Beam FC	Beam Width
2.0 ft	17.5 fc	6.0 ft 6.1 ft
4.0 ft	4.38 fc	12.1 ft 12.2 ft
6.0 ft	1.95 fc	18.1 ft 18.4 ft
8.0 ft	1.10 fc	24.2 ft 24.5 ft
10.0 ft	0.70 fc	30.2 ft 30.6 ft
12.0 ft	0.49 fc	36.2 ft 36.7 ft

SO Violet

	Center Beam FC	Beam Width
2.0 ft	17.0 fc	6.0 ft 6.1 ft
4.0 ft	4.35 fc	12.1 ft 12.2 ft
6.0 ft	1.89 fc	18.1 ft 18.4 ft
8.0 ft	1.06 fc	24.2 ft 24.5 ft
10.0 ft	0.68 fc	30.2 ft 30.6 ft
12.0 ft	0.47 fc	36.2 ft 36.7 ft

SO Turquoise

	Center Beam FC	Beam Width
2.0 ft	14.7 fc	6.0 ft 6.1 ft
4.0 ft	3.68 fc	12.1 ft 12.2 ft
6.0 ft	1.64 fc	18.1 ft 18.4 ft
8.0 ft	0.92 fc	24.2 ft 24.5 ft
10.0 ft	0.59 fc	30.2 ft 30.6 ft
12.0 ft	0.41 fc	36.2 ft 36.7 ft

SO Dark Blue

	Center Beam FC	Beam Width
2.0 ft	7.36 fc	6.0 ft 6.1 ft
4.0 ft	1.84 fc	12.1 ft 12.2 ft
6.0 ft	0.82 fc	18.1 ft 18.4 ft
8.0 ft	0.46 fc	24.2 ft 24.5 ft
10.0 ft	0.29 fc	30.2 ft 30.6 ft
12.0 ft	0.20 fc	36.2 ft 36.7 ft

SO Dark Orange

	Center Beam FC	Beam Width
2.0 ft	36.8 fc	6.0 ft 6.1 ft
4.0 ft	9.20 fc	12.1 ft 12.2 ft
6.0 ft	4.09 fc	18.1 ft 18.4 ft
8.0 ft	2.30 fc	24.2 ft 24.5 ft
10.0 ft	1.47 fc	30.2 ft 30.6 ft
12.0 ft	1.02 fc	36.2 ft 36.7 ft

HIGH OUTPUT

HO Red

	Center Beam FC	Beam Width
2.0 ft	40.7 fc	6.0 ft 6.1 ft
4.0 ft	10.2 fc	12.1 ft 12.2 ft
6.0 ft	4.52 fc	18.1 ft 18.4 ft
8.0 ft	2.54 fc	24.2 ft 24.5 ft
10.0 ft	1.63 fc	30.2 ft 30.6 ft
12.0 ft	1.13 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Green

	Center Beam FC	Beam Width
2.0 ft	8.95 fc	6.0 ft 6.1 ft
4.0 ft	2.15 fc	12.1 ft 12.2 ft
6.0 ft	0.95 fc	18.1 ft 18.4 ft
8.0 ft	0.54 fc	24.2 ft 24.5 ft
10.0 ft	0.34 fc	30.2 ft 30.6 ft
12.0 ft	0.24 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Blue

	Center Beam FC	Beam Width
2.0 ft	25.1 fc	6.0 ft 6.1 ft
4.0 ft	6.26 fc	12.1 ft 12.2 ft
6.0 ft	2.78 fc	18.1 ft 18.4 ft
8.0 ft	1.57 fc	24.2 ft 24.5 ft
10.0 ft	1.00 fc	30.2 ft 30.6 ft
12.0 ft	0.70 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Amber

	Center Beam FC	Beam Width
2.0 ft	40.7 fc	6.0 ft 6.1 ft
4.0 ft	10.2 fc	12.1 ft 12.2 ft
6.0 ft	4.52 fc	18.1 ft 18.4 ft
8.0 ft	2.54 fc	24.2 ft 24.5 ft
10.0 ft	1.63 fc	30.2 ft 30.6 ft
12.0 ft	1.13 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Yellow

	Center Beam FC	Beam Width
2.0 ft	9.42 fc	6.0 ft 6.1 ft
4.0 ft	2.35 fc	12.1 ft 12.2 ft
6.0 ft	1.05 fc	18.1 ft 18.4 ft
8.0 ft	0.59 fc	24.2 ft 24.5 ft
10.0 ft	0.38 fc	30.2 ft 30.6 ft
12.0 ft	0.26 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Golden Yellow

	Center Beam FC	Beam Width
2.0 ft	22.3 fc	6.0 ft 6.1 ft
4.0 ft	5.57 fc	12.1 ft 12.2 ft
6.0 ft	2.48 fc	18.1 ft 18.4 ft
8.0 ft	1.39 fc	24.2 ft 24.5 ft
10.0 ft	0.89 fc	30.2 ft 30.6 ft
12.0 ft	0.62 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Ice Blue

	Center Beam FC	Beam Width
2.0 ft	18.7 fc	6.0 ft 6.1 ft
4.0 ft	4.69 fc	12.1 ft 12.2 ft
6.0 ft	2.08 fc	18.1 ft 18.4 ft
8.0 ft	1.17 fc	24.2 ft 24.5 ft
10.0 ft	0.75 fc	30.2 ft 30.6 ft
12.0 ft	0.52 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Cyan

	Center Beam FC	Beam Width
2.0 ft	29.6 fc	6.0 ft 6.1 ft
4.0 ft	7.40 fc	12.1 ft 12.2 ft
6.0 ft	3.29 fc	18.1 ft 18.4 ft
8.0 ft	1.85 fc	24.2 ft 24.5 ft
10.0 ft	1.18 fc	30.2 ft 30.6 ft
12.0 ft	0.82 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Light Green

	Center Beam FC	Beam Width
2.0 ft	85.9 fc	6.0 ft 6.1 ft
4.0 ft	21.5 fc	12.1 ft 12.2 ft
6.0 ft	9.54 fc	18.1 ft 18.4 ft
8.0 ft	5.37 fc	24.2 ft 24.5 ft
10.0 ft	3.43 fc	30.2 ft 30.6 ft
12.0 ft	2.38 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Pink

	Center Beam FC	Beam Width
2.0 ft	35.2 fc	6.0 ft 6.1 ft
4.0 ft	8.80 fc	12.1 ft 12.2 ft
6.0 ft	3.91 fc	18.1 ft 18.4 ft
8.0 ft	2.20 fc	24.2 ft 24.5 ft
10.0 ft	1.41 fc	30.2 ft 30.6 ft
12.0 ft	0.98 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Violet

	Center Beam FC	Beam Width
2.0 ft	34.0 fc	6.0 ft 6.1 ft
4.0 ft	8.50 fc	12.1 ft 12.2 ft
6.0 ft	3.78 fc	18.1 ft 18.4 ft
8.0 ft	2.12 fc	24.2 ft 24.5 ft
10.0 ft	1.36 fc	30.2 ft 30.6 ft
12.0 ft	0.94 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Turquoise

	Center Beam FC	Beam Width
2.0 ft	29.9 fc	6.0 ft 6.1 ft
4.0 ft	7.47 fc	12.1 ft 12.2 ft
6.0 ft	3.32 fc	18.1 ft 18.4 ft
8.0 ft	1.87 fc	24.2 ft 24.5 ft
10.0 ft	1.19 fc	30.2 ft 30.6 ft
12.0 ft	0.83 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Dark Blue



	Center Beam FC	Beam Width
2.0 ft	41.0 fc	6.0 ft 6.1 ft
4.0 ft	10.3 fc	12.1 ft 12.2 ft
6.0 ft	4.56 fc	18.1 ft 18.4 ft
8.0 ft	2.56 fc	24.2 ft 24.5 ft
10.0 ft	1.64 fc	30.2 ft 30.6 ft
12.0 ft	1.14 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Dark Orange

	Center Beam FC	Beam Width
2.0 ft	73.6 fc	6.0 ft 6.1 ft
4.0 ft	18.4 fc	12.1 ft 12.2 ft
6.0 ft	8.18 fc	18.1 ft 18.4 ft
8.0 ft	4.60 fc	24.2 ft 24.5 ft
10.0 ft	2.94 fc	30.2 ft 30.6 ft
12.0 ft	2.04 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

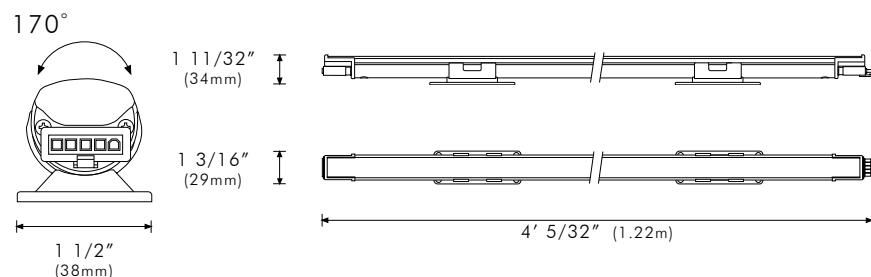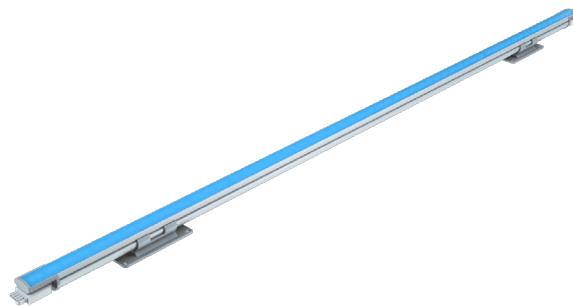

0-10V

Standard Output	Lumens	Efficacy (120V)	Efficacy (240V)	Efficacy (277V)
Red	672	38	35	34
Green	784	44	41	40
Blue	560	32	29	29
Amber	936	53	48	48
Yellow	860	49	45	44
Golden Yellow	2036	115	105	104
Ice Blue	1716	97	89	88
Cyan	676	38	35	35
Light Green	1960	111	102	101
Pink	800	45	41	41
Violet	776	44	40	40
Turquoise	672	38	35	34
Dark Blue	336	19	17	17
Dark Orange	1680	95	87	86

SO Power Consumption

120V	17.7W
240V	19.3W
277V	19.5W

SO Max Continuous Run

120V AC	120 ft
240V AC	240 ft
277V AC	240 ft

High Output	Lumens	Efficacy (120V)	Efficacy (240V)	Efficacy (277V)
Red	1344	36	35	34
Green	1568	42	41	40
Blue	1120	30	29	29
Amber	1872	51	49	48
Yellow	1720	46	45	44
Golden Yellow	4072	110	107	104
Ice Blue	3432	93	90	88
Cyan	1352	37	36	35
Light Green	3920	106	103	101
Pink	1600	43	42	41
Violet	1552	42	41	40
Turquoise	1348	36	35	35
Dark Blue	1872	51	49	48
Dark Orange	3360	91	88	86

HO Power Consumption


120V	37W
240V	38W
277V	39W

HO Max Continuous Run


120V AC	50 ft
240V AC	100 ft
277V AC	100 ft

STANDARD OUTPUT


SO Red

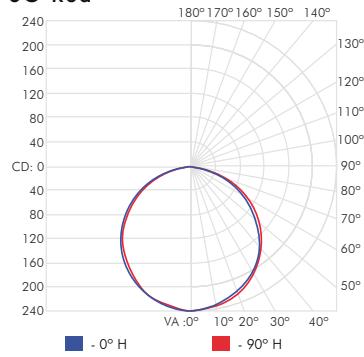


SO Green

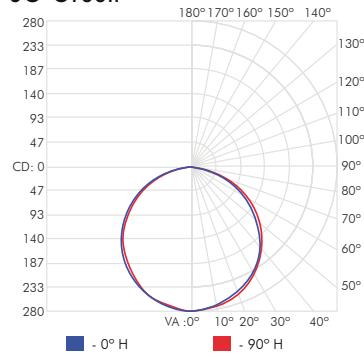


SO Blue

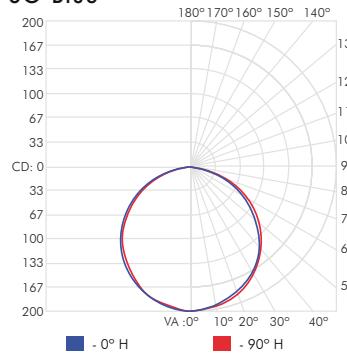


SO Amber

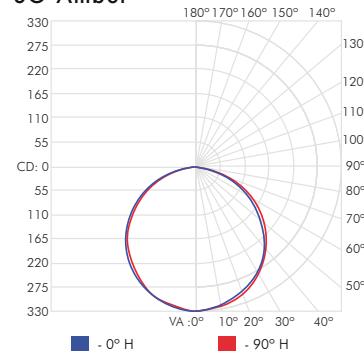


SO Yellow

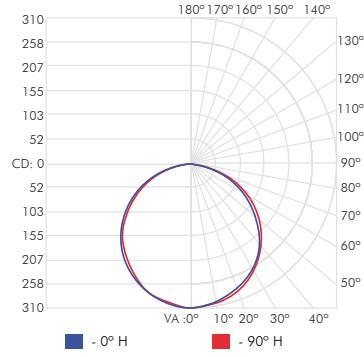


SO Golden Yellow

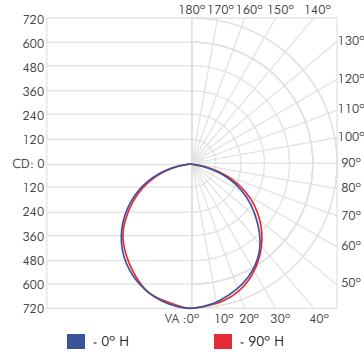


SO Ice Blue

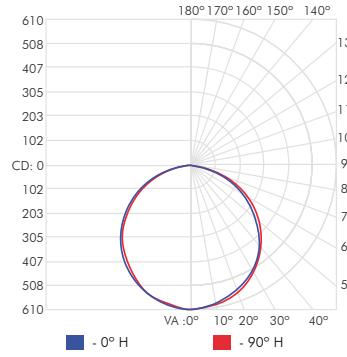


SO Cyan

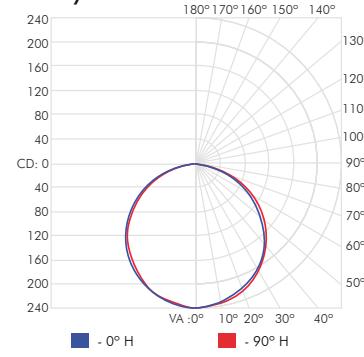


SO Light Green

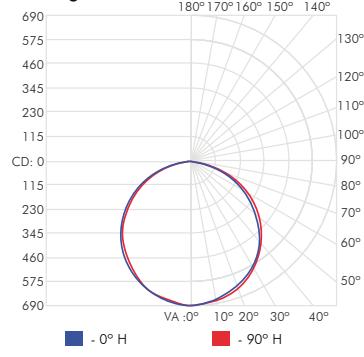


SO Pink

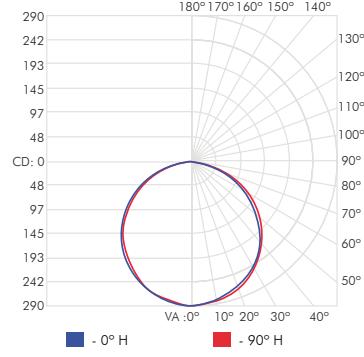


SO Violet

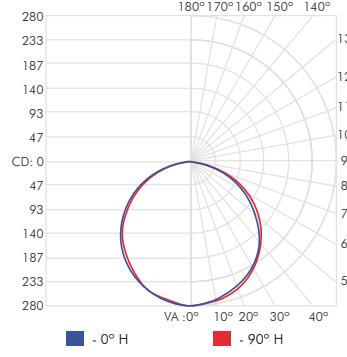


SO Turquoise

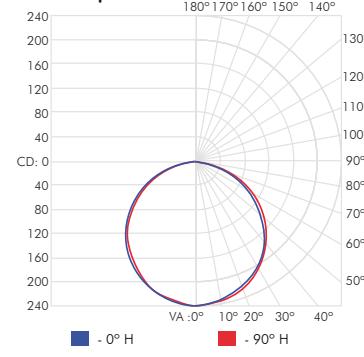

SO Dark Blue

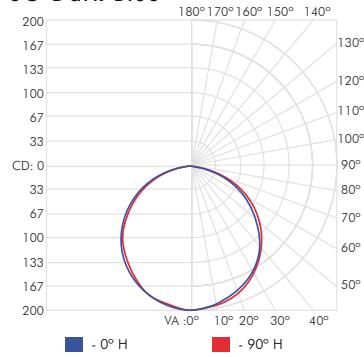


SO Dark Orange

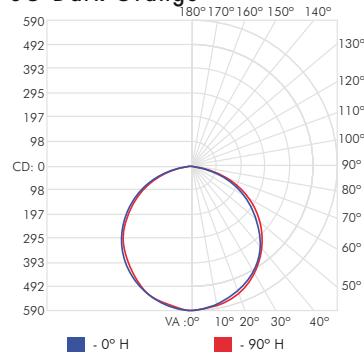


HIGH OUTPUT


HO Red

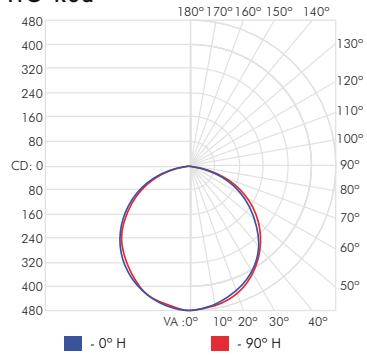


HO Green

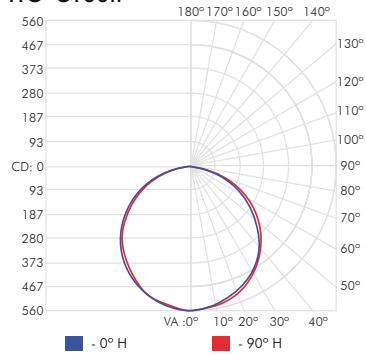


HO Blue

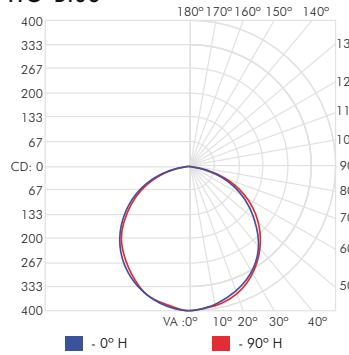


HO Amber

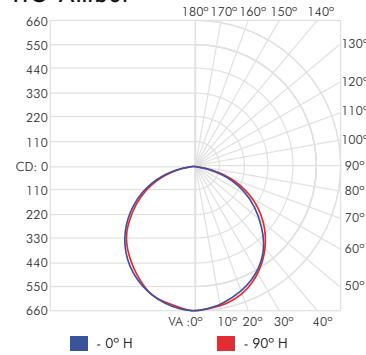


HO Yellow

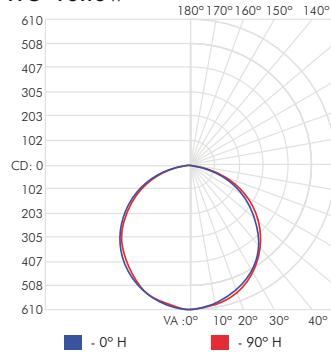


HO Golden Yellow

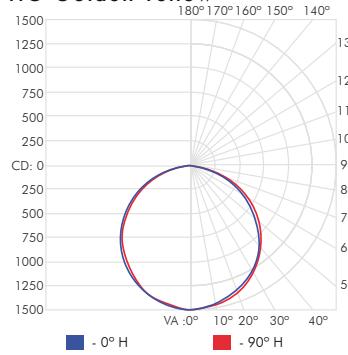


HO Ice Blue

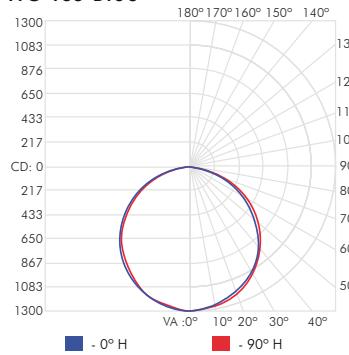


HO Cyan

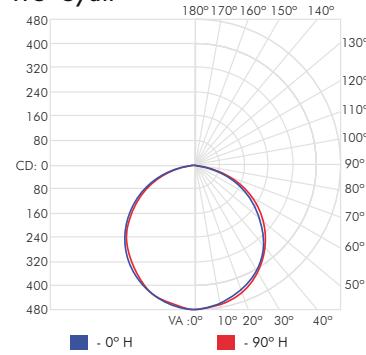


HO Light Green

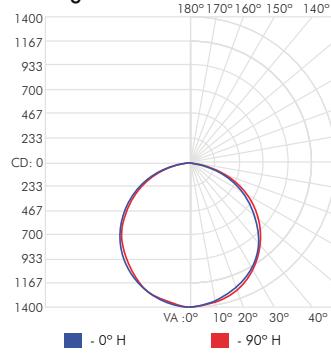


HO Pink

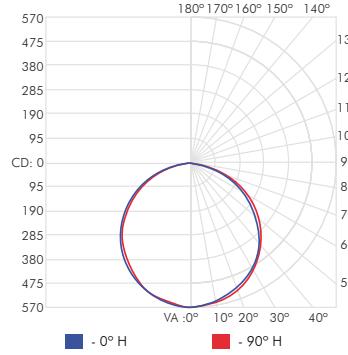


HO Violet

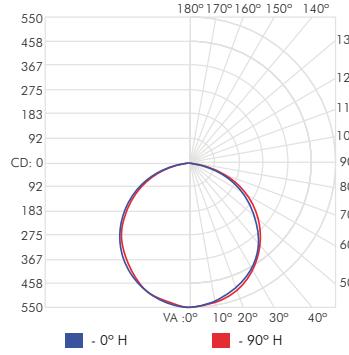


HO Turquoise

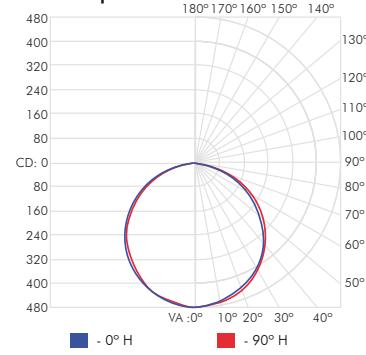

HO Dark Blue

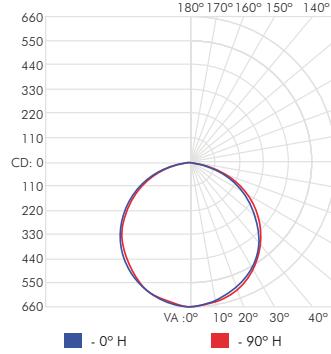

HO Dark Orange

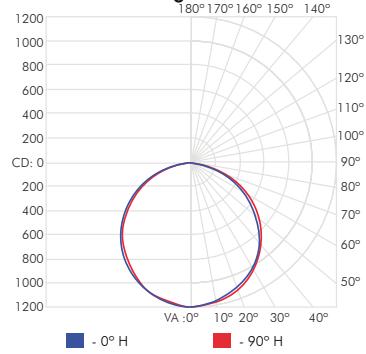

STANDARD OUTPUT

SO Red

	Center Beam FC	Beam Width
2.0 ft	14.7 fc	6.0 ft 6.1 ft
4.0 ft	3.68 fc	12.1 ft 12.2 ft
6.0 ft	1.64 fc	18.1 ft 18.4 ft
8.0 ft	0.92 fc	24.2 ft 24.5 ft
10.0 ft	0.59 fc	30.2 ft 30.6 ft
12.0 ft	0.41 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

SO Green

	Center Beam FC	Beam Width
2.0 ft	68.7 fc	6.0 ft 6.1 ft
4.0 ft	17.2 fc	12.1 ft 12.2 ft
6.0 ft	7.63 fc	18.1 ft 18.4 ft
8.0 ft	4.29 fc	24.2 ft 24.5 ft
10.0 ft	2.75 fc	30.2 ft 30.6 ft
12.0 ft	1.91 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

SO Blue

	Center Beam FC	Beam Width
2.0 ft	49.1 fc	6.0 ft 6.1 ft
4.0 ft	12.3 fc	12.1 ft 12.2 ft
6.0 ft	5.45 fc	18.1 ft 18.4 ft
8.0 ft	3.07 fc	24.2 ft 24.5 ft
10.0 ft	1.96 fc	30.2 ft 30.6 ft
12.0 ft	1.36 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

SO Amber

	Center Beam FC	Beam Width
2.0 ft	82.0 fc	6.0 ft 6.1 ft
4.0 ft	20.5 fc	12.1 ft 12.2 ft
6.0 ft	9.11 fc	18.1 ft 18.4 ft
8.0 ft	5.13 fc	24.2 ft 24.5 ft
10.0 ft	3.28 fc	30.2 ft 30.6 ft
12.0 ft	2.28 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

SO Yellow

	Center Beam FC	Beam Width
2.0 ft	75.3 fc	6.0 ft 6.1 ft
4.0 ft	18.8 fc	12.1 ft 12.2 ft
6.0 ft	8.37 fc	18.1 ft 18.4 ft
8.0 ft	4.71 fc	24.2 ft 24.5 ft
10.0 ft	3.01 fc	30.2 ft 30.6 ft
12.0 ft	2.09 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

SO Golden Yellow

	Center Beam FC	Beam Width
2.0 ft	178 fc	6.0 ft 6.1 ft
4.0 ft	44.6 fc	12.1 ft 12.2 ft
6.0 ft	19.8 fc	18.1 ft 18.4 ft
8.0 ft	11.1 fc	24.2 ft 24.5 ft
10.0 ft	7.13 fc	30.2 ft 30.6 ft
12.0 ft	4.95 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

SO Ice Blue

	Center Beam FC	Beam Width
2.0 ft	150 fc	6.0 ft 6.1 ft
4.0 ft	37.6 fc	12.1 ft 12.2 ft
6.0 ft	16.7 fc	18.1 ft 18.4 ft
8.0 ft	9.40 fc	24.2 ft 24.5 ft
10.0 ft	6.01 fc	30.2 ft 30.6 ft
12.0 ft	4.18 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

SO Cyan

	Center Beam FC	Beam Width
2.0 ft	59.2 fc	6.0 ft 6.1 ft
4.0 ft	14.8 fc	12.1 ft 12.2 ft
6.0 ft	6.58 fc	18.1 ft 18.4 ft
8.0 ft	3.70 fc	24.2 ft 24.5 ft
10.0 ft	2.37 fc	30.2 ft 30.6 ft
12.0 ft	1.65 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

SO Light Green

	Center Beam FC	Beam Width
2.0 ft	172 fc	6.0 ft 6.1 ft
4.0 ft	42.9 fc	12.1 ft 12.2 ft
6.0 ft	19.1 fc	18.1 ft 18.4 ft
8.0 ft	10.7 fc	24.2 ft 24.5 ft
10.0 ft	6.87 fc	30.2 ft 30.6 ft
12.0 ft	4.77 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

SO Pink

	Center Beam FC	Beam Width
2.0 ft	70.1 fc	6.0 ft 6.1 ft
4.0 ft	17.5 fc	12.1 ft 12.2 ft
6.0 ft	7.79 fc	18.1 ft 18.4 ft
8.0 ft	4.38 fc	24.2 ft 24.5 ft
10.0 ft	2.80 fc	30.2 ft 30.6 ft
12.0 ft	1.95 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

SO Violet

	Center Beam FC	Beam Width
2.0 ft	68.0 fc	6.0 ft 6.1 ft
4.0 ft	17.0 fc	12.1 ft 12.2 ft
6.0 ft	7.55 fc	18.1 ft 18.4 ft
8.0 ft	4.25 fc	24.2 ft 24.5 ft
10.0 ft	2.72 fc	30.2 ft 30.6 ft
12.0 ft	1.89 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

SO Turquoise

	Center Beam FC	Beam Width
2.0 ft	14.7 fc	6.0 ft 6.1 ft
4.0 ft	3.68 fc	12.1 ft 12.2 ft
6.0 ft	1.64 fc	18.1 ft 18.4 ft
8.0 ft	0.92 fc	24.2 ft 24.5 ft
10.0 ft	0.59 fc	30.2 ft 30.6 ft
12.0 ft	0.41 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

SO Dark Blue

	Center Beam FC	Beam Width
2.0 ft	29.4 fc	6.0 ft 6.1 ft
4.0 ft	7.36 fc	12.1 ft 12.2 ft
6.0 ft	3.27 fc	18.1 ft 18.4 ft
8.0 ft	1.84 fc	24.2 ft 24.5 ft
10.0 ft	1.18 fc	30.2 ft 30.6 ft
12.0 ft	0.82 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

SO Dark Orange

	Center Beam FC	Beam Width
2.0 ft	147 fc	6.0 ft 6.1 ft
4.0 ft	36.8 fc	12.1 ft 12.2 ft
6.0 ft	16.4 fc	18.1 ft 18.4 ft
8.0 ft	9.20 fc	24.2 ft 24.5 ft
10.0 ft	5.89 fc	30.2 ft 30.6 ft
12.0 ft	4.09 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HIGH OUTPUT

HO Red

	Center Beam FC	Beam Width
2.0 ft	118 fc	6.0 ft 6.1 ft
4.0 ft	29.4 fc	12.1 ft 12.2 ft
6.0 ft	13.1 fc	18.1 ft 18.4 ft
8.0 ft	7.36 fc	24.2 ft 24.5 ft
10.0 ft	4.71 fc	30.2 ft 30.6 ft
12.0 ft	3.27 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Green

	Center Beam FC	Beam Width
2.0 ft	137 fc	6.0 ft 6.1 ft
4.0 ft	34.3 fc	12.1 ft 12.2 ft
6.0 ft	15.3 fc	18.1 ft 18.4 ft
8.0 ft	8.59 fc	24.2 ft 24.5 ft
10.0 ft	5.49 fc	30.2 ft 30.6 ft
12.0 ft	3.82 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Blue

	Center Beam FC	Beam Width
2.0 ft	98.1 fc	6.0 ft 6.1 ft
4.0 ft	24.5 fc	12.1 ft 12.2 ft
6.0 ft	10.9 fc	18.1 ft 18.4 ft
8.0 ft	6.13 fc	24.2 ft 24.5 ft
10.0 ft	3.92 fc	30.2 ft 30.6 ft
12.0 ft	2.73 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Amber

	Center Beam FC	Beam Width
2.0 ft	164 fc	6.0 ft 6.1 ft
4.0 ft	41.0 fc	12.1 ft 12.2 ft
6.0 ft	18.2 fc	18.1 ft 18.4 ft
8.0 ft	10.2 fc	24.2 ft 24.5 ft
10.0 ft	6.56 fc	30.2 ft 30.6 ft
12.0 ft	4.56 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Yellow

	Center Beam FC	Beam Width
2.0 ft	151 fc	6.0 ft 6.1 ft
4.0 ft	37.7 fc	12.1 ft 12.2 ft
6.0 ft	16.7 fc	18.1 ft 18.4 ft
8.0 ft	9.42 fc	24.2 ft 24.5 ft
10.0 ft	6.03 fc	30.2 ft 30.6 ft
12.0 ft	4.19 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Golden Yellow

	Center Beam FC	Beam Width
2.0 ft	357 fc	6.0 ft 6.1 ft
4.0 ft	89.2 fc	12.1 ft 12.2 ft
6.0 ft	39.6 fc	18.1 ft 18.4 ft
8.0 ft	22.3 fc	24.2 ft 24.5 ft
10.0 ft	14.3 fc	30.2 ft 30.6 ft
12.0 ft	9.91 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Ice Blue

	Center Beam FC	Beam Width
2.0 ft	301 fc	6.0 ft 6.1 ft
4.0 ft	75.2 fc	12.1 ft 12.2 ft
6.0 ft	33.4 fc	18.1 ft 18.4 ft
8.0 ft	18.8 fc	24.2 ft 24.5 ft
10.0 ft	12.0 fc	30.2 ft 30.6 ft
12.0 ft	8.35 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Cyan

	Center Beam FC	Beam Width
2.0 ft	118 fc	6.0 ft 6.1 ft
4.0 ft	29.6 fc	12.1 ft 12.2 ft
6.0 ft	13.2 fc	18.1 ft 18.4 ft
8.0 ft	7.40 fc	24.2 ft 24.5 ft
10.0 ft	4.74 fc	30.2 ft 30.6 ft
12.0 ft	3.29 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Light Green

	Center Beam FC	Beam Width
2.0 ft	343 fc	6.0 ft 6.1 ft
4.0 ft	85.9 fc	12.1 ft 12.2 ft
6.0 ft	38.2 fc	18.1 ft 18.4 ft
8.0 ft	21.5 fc	24.2 ft 24.5 ft
10.0 ft	13.7 fc	30.2 ft 30.6 ft
12.0 ft	9.54 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Pink

	Center Beam FC	Beam Width
2.0 ft	140 fc	6.0 ft 6.1 ft
4.0 ft	35.0 fc	12.1 ft 12.2 ft
6.0 ft	15.6 fc	18.1 ft 18.4 ft
8.0 ft	8.76 fc	24.2 ft 24.5 ft
10.0 ft	5.61 fc	30.2 ft 30.6 ft
12.0 ft	3.89 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Violet

	Center Beam FC	Beam Width
2.0 ft	136 fc	6.0 ft 6.1 ft
4.0 ft	34.0 fc	12.1 ft 12.2 ft
6.0 ft	15.1 fc	18.1 ft 18.4 ft
8.0 ft	8.50 fc	24.2 ft 24.5 ft
10.0 ft	5.44 fc	30.2 ft 30.6 ft
12.0 ft	3.78 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Turquoise

	Center Beam FC	Beam Width
2.0 ft	118 fc	6.0 ft 6.1 ft
4.0 ft	29.5 fc	12.1 ft 12.2 ft
6.0 ft	13.1 fc	18.1 ft 18.4 ft
8.0 ft	7.38 fc	24.2 ft 24.5 ft
10.0 ft	4.72 fc	30.2 ft 30.6 ft
12.0 ft	3.28 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Dark Blue

	Center Beam FC	Beam Width
2.0 ft	164 fc	6.0 ft 6.1 ft
4.0 ft	41.0 fc	12.1 ft 12.2 ft
6.0 ft	18.2 fc	18.1 ft 18.4 ft
8.0 ft	10.2 fc	24.2 ft 24.5 ft
10.0 ft	6.56 fc	30.2 ft 30.6 ft
12.0 ft	4.56 fc	36.2 ft 36.7 ft


▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°

HO Dark Orange


	Center Beam FC	Beam Width
2.0 ft	294 fc	6.0 ft 6.1 ft
4.0 ft	73.6 fc	12.1 ft 12.2 ft
6.0 ft	32.7 fc	18.1 ft 18.4 ft
8.0 ft	18.4 fc	24.2 ft 24.5 ft
10.0 ft	11.8 fc	30.2 ft 30.6 ft
12.0 ft	8.18 fc	36.2 ft 36.7 ft

▲ Vert. Spread: 113° ▲ Horiz. Spread: 113.7°


CIE 1931 Chromaticity Diagram

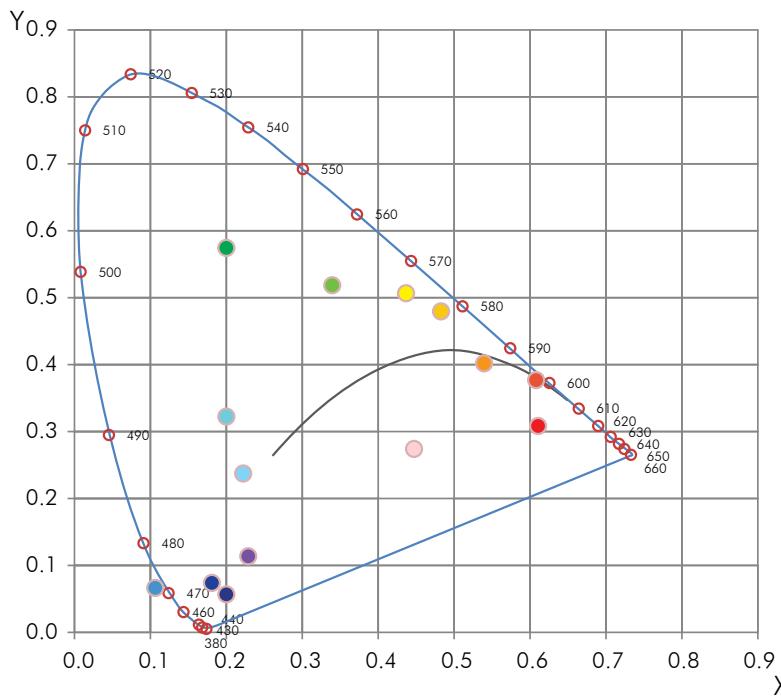

Color	Coordinate	Wavelength
Red	x: 0.6221 y: 0.3174 u: 0.4482 v: 0.5111	620nm
Green	x: 0.2075 y: 0.5883 u: 0.0835 v: 0.5445	520nm
Blue	x: 0.1804 y: 0.0715 u: 0.2158 v: 0.1834	445nm
Amber	x: 0.5415 y: 0.4189 u: 0.3145 v: 0.5412	611nm
Yellow	x: 0.4441 y: 0.5161 u: 0.2140 v: 0.5593	557nm
Golden Yellow	x: 0.4814 y: 0.4892 u: 0.2438 v: 0.5568	583nm
Ice Blue	x: 0.2317 y: 0.2495 u: 0.1676 v: 0.4059	446nm
Cyan	x: 0.1158 y: 0.0735 u: 0.3234 v: 0.5522	473nm
Light Green	x: 0.3458 y: 0.5241 u: 0.1611 v: 0.5487	534nm
Pink	x: 0.4547 y: 0.2832 u: 0.3342 v: 0.4649	621nm
Violet	x: 0.2337 y: 0.1275 u: 0.2301 v: 0.2823	448nm
Turquoise	x: 0.2047 y: 0.3361 u: 0.1852 v: 0.5652	485nm
Dark Blue	x: 0.1542 y: 0.0259 u: 0.2055 v: 0.0776	443nm
Dark Orange	x: 0.6130 y: 0.3791 u: 0.3878 v: 0.5396	622nm

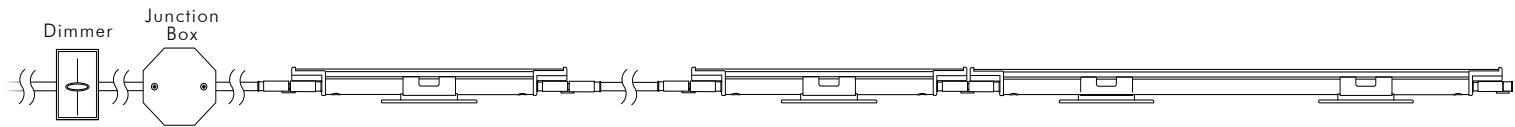

UL / cUL Dimming

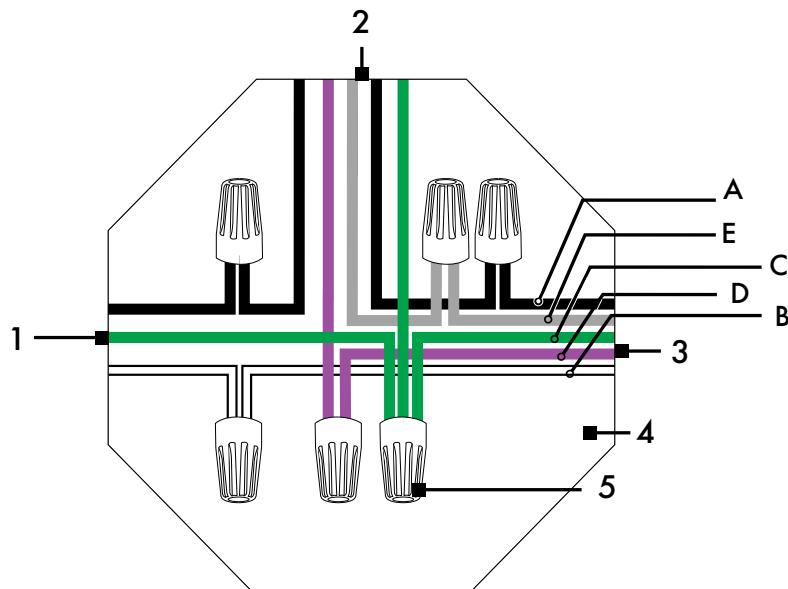

Wiring Legend

1	Power 100-277V
2	0-10V Dimmer
3	5 Pin Leader Cable
4	Junction Box
5	Wiring Nuts

5 Pin Leader Cable


	UL/cUL	CE/CCC*
A	Live 100-277V	— Black
B	Neutral	— White
C	Ground	— Green
D	Data Positive	— Purple
E	Data Negative	— Gray

*Not illustrated


Due to continuous improvements and innovations, specifications may change without notice.
Please refer to our website for current technical data. These figures are provided as a guideline only and may vary with differing power supplies and installations. All rights reserved. E&OE.

0-10V Connectors


Male Output

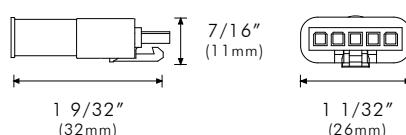

Female Output


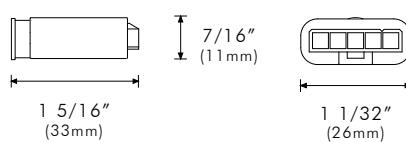


Angle Adjustment

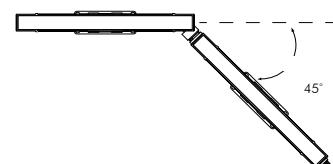

Compatible Dimmers

Grafik Eye QS with Grafik Eye GRX-TVI
Legrand CD4FBLW
Legrand LMRC-111
Leviton IP710-DL
Lutron Skylark SLV-600P

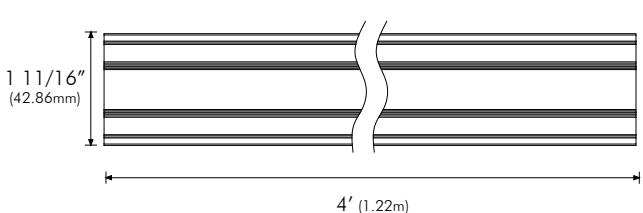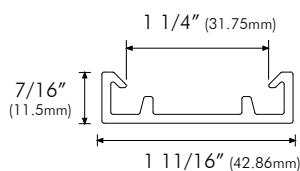

MODA MINI COVE MOUNTING TRACK

Mounting Mini Cove.


Allows users to install Moda Mini Cove fixtures in a continuous linear position. Moda Mini Cove Mounting Tracks come packaged in 5 pieces of 4ft sections to create a continuous run of 20ft.

Options

Finish G - Gray

Length 4ft - 4' Sections

Quantity 5 Pieces (20ft)

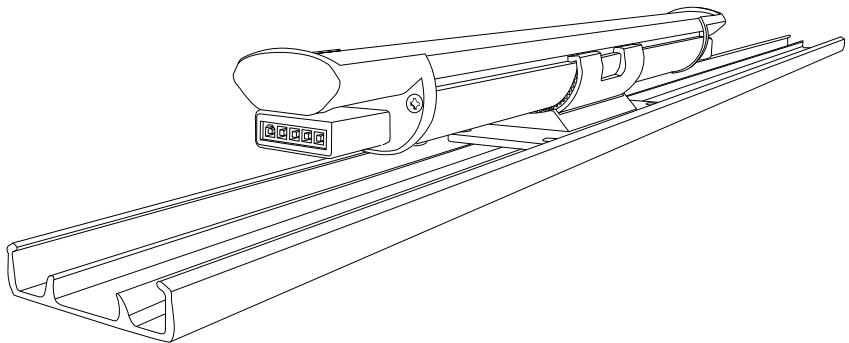


Physical

Applications Cove, Accent


Construction Polycarbonate

0-10V LEADER CABLES


Moda Mini Cove Interior 5 Pin Leader Cables

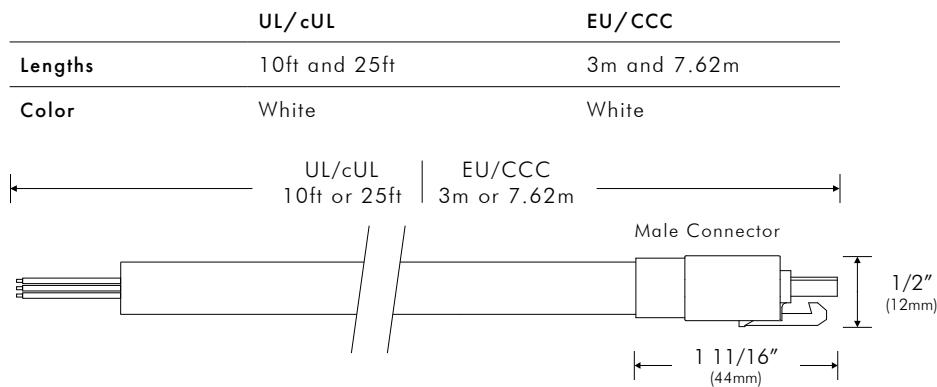

Male Connector

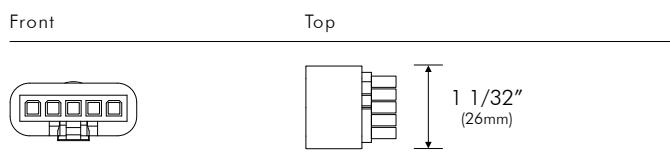


Pin Assignment

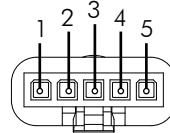


	UL/cUL	EU/CCC
1	Live 100-277V	Black
2	Neutral	White
3	Ground	Green
4	Data Positive	Purple
5	Data Negative	Gray

0-10V JUMPER CABLES


Moda Mini Cove Interior 5 Pin Jumper Cables

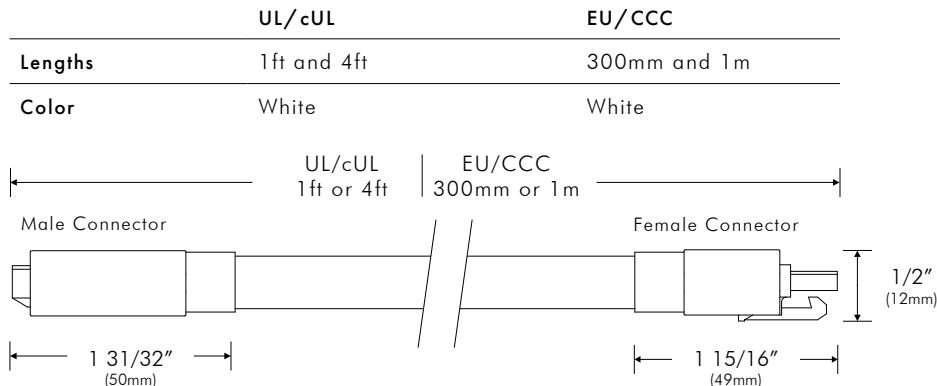


Connectors

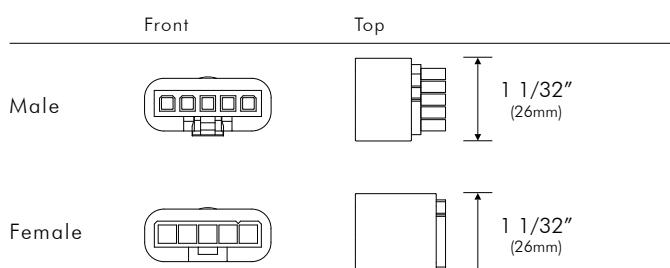

Pin Assignment

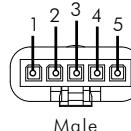

	UL/cUL	EU/CCC
1	Live 100-277V	Black
2	Neutral	White
3	Ground	Green
4	Data Positive	Purple
5	Data Negative	Gray

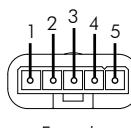

	UL/cUL	EU/CCC
1	Data Negative	Gray
2	Data Positive	Purple
3	Ground	Green
4	Neutral	White
5	Live 100-277V	Black

Fixture	SKU
0-10V SO 1FT	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Red 1FT 096-1000
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Green 1FT 096-1001
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Blue 1FT 096-1002
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Amber 1FT 096-1003
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Yellow 1FT 096-1004
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Pink 1FT 096-1005
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Cyan 1FT 096-1006
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Violet 1FT 096-1007
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Turquoise 1FT 096-1008
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Ice Blue 1FT 096-1009
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Light Green 1FT 096-1010
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Golden Yellow 1FT 096-1011
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Dark Blue 1FT 096-1012
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Dark Orange 1FT 096-1013
0-10V HO 1FT	Moda Mini Cove Interior High Output Silver 0-10V Dimming Red 1FT 096-1200
	Moda Mini Cove Interior High Output Silver 0-10V Dimming Green 1FT 096-1201
	Moda Mini Cove Interior High Output Silver 0-10V Dimming Blue 1FT 096-1202
	Moda Mini Cove Interior High Output Silver 0-10V Dimming Amber 1FT 096-1203
	Moda Mini Cove Interior High Output Silver 0-10V Dimming Yellow 1FT 096-1204
	Moda Mini Cove Interior High Output Silver 0-10V Dimming Pink 1FT 096-1205
	Moda Mini Cove Interior High Output Silver 0-10V Dimming Cyan 1FT 096-1206
	Moda Mini Cove Interior High Output Silver 0-10V Dimming Violet 1FT 096-1207
	Moda Mini Cove Interior High Output Silver 0-10V Dimming Turquoise 1FT 096-1208
	Moda Mini Cove Interior High Output Silver 0-10V Dimming Ice Blue 1FT 096-1209
	Moda Mini Cove Interior High Output Silver 0-10V Dimming Light Green 1FT 096-1210
	Moda Mini Cove Interior High Output Silver 0-10V Dimming Golden Yellow 1FT 096-1211
	Moda Mini Cove Interior High Output Silver 0-10V Dimming Dark Blue 1FT 096-1212
	Moda Mini Cove Interior High Output Silver 0-10V Dimming Dark Orange 1FT 096-1213
0-10V SO 4FT	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Red 4FT 096-3000
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Green 4FT 096-3001
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Blue 4FT 096-3002
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Amber 4FT 096-3003
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Yellow 4FT 096-3004
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Pink 4FT 096-3005
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Cyan 4FT 096-3006
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Violet 4FT 096-3007
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Turquoise 4FT 096-3008
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Ice Blue 4FT 096-3009
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Light Green 4FT 096-3010
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Golden Yellow 4FT 096-3011
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Dark Blue 4FT 096-3012
	Moda Mini Cove Interior Standard Output Silver 0-10V Dimming Dark Orange 4FT 096-3013

ITEM	DESCRIPTION	SKU
Moda Mini Cove Interior High Output Silver 0-10V Dimming Red 4FT	096-3200	
Moda Mini Cove Interior High Output Silver 0-10V Dimming Green 4FT	096-3201	
Moda Mini Cove Interior High Output Silver 0-10V Dimming Blue 4FT	096-3202	
Moda Mini Cove Interior High Output Silver 0-10V Dimming Amber 4FT	096-3203	
Moda Mini Cove Interior High Output Silver 0-10V Dimming Yellow 4FT	096-3204	
Moda Mini Cove Interior High Output Silver 0-10V Dimming Pink 4FT	096-3205	
Moda Mini Cove Interior High Output Silver 0-10V Dimming Cyan 4FT	096-3206	
Moda Mini Cove Interior High Output Silver 0-10V Dimming Violet 4FT	096-3207	
Moda Mini Cove Interior High Output Silver 0-10V Dimming Turquoise 4FT	096-3208	
Moda Mini Cove Interior High Output Silver 0-10V Dimming Ice Blue 4FT	096-3209	
Moda Mini Cove Interior High Output Silver 0-10V Dimming Light Green 4FT	096-3210	
Moda Mini Cove Interior High Output Silver 0-10V Dimming Golden Yellow 4FT	096-3211	
Moda Mini Cove Interior High Output Silver 0-10V Dimming Dark Blue 4FT	096-3212	
Moda Mini Cove Interior High Output Silver 0-10V Dimming Dark Orange 4FT	096-3213	

ACCESSORIES	DESCRIPTION	SKU
Leader Cable US 5 Pin 10ft	Power to first fixture of run	299-0100
Leader Cable US 5 Pin 25ft	Power to first fixture of run	299-0102
Jumper Cable US 5 Pin 1ft	Connection between fixtures	299-1100
Jumper Cable US 5 Pin 4ft	Connection between fixtures	299-1102
Leader Cable EU 5 Pin 3m	Power to first fixture of run	299-0101
Leader Cable EU 5 Pin 7.62m	Power to first fixture of run	299-0103
Jumper Cable EU 5 Pin 300mm	Connection between fixtures	299-1101
Jumper Cable EU 5 Pin 1m	Connection between fixtures	299-1103
Terminator 5 Pin	Must be fixed to last fixture for safety	299-2100
Mounting Track	Allows user to install fixtures in a continuous linear position. Packaged in 5 4ft sections in total of 20ft.	299-3200